



READ THESE INSTRUCTIONS PRIOR TO USE

IMPORTANT: This pole saw is equipped with a tamper resistant Caution Label that identifies conditions that may cause serious injury, electrical shock, death by electrocution and blade hazards. If this label becomes illegible, please contact Castellari for a replacement label. Intentional removal of the Caution Label is strictly prohibited and a violation of OSHA regulations. **Do not discard these instructions!**

IMPORTANT SAFETY PRECAUTIONS



DANGER! These polesaws conduct electricity! Do not use within 50 feet of electrical wires or other potentially energized lines, grounded objects, or conductors for risk of extreme injury or death by electrocution.



WARNING! Use this pole saw in strict accordance with ANSI Standard Z133.1-2006 and all applicable OSHA regulations (far users in the US)



WARNING! Do not operate the pole saw unless you are standing on dry ground.



WARNING! Cutting overhead can cause falling objects that can result in injury or death. Always use extreme caution when cutting overhead to have a plan of retreat from the area in which objects are likely to fall ("Fall Zone"). Do not allow others to stand or walk within fifteen feet of this Fall Zone due to potential "danger zone" from objects bouncing.



WARNING! The pole saw blade is extremely sharp. Do not touch or contact the blade with any body parts. Always store the saw blade in the provided safety cover when not in use. Keep out of reach of children.



WARNING! Castellari, its affiliates, subsidiaries, importers, distributors and dealers are not responsible for and shall not be liable for injury, loss or damage resulting from improper use of this pole saw.



Intended use - It is highly recommended to use it only for the intended uses: pruning. The polesaw is projected only to wood cuts. It is forbidden cut other materials


POLE SAW USAGE INSTRUCTIONS

INTENDED USAGE

Castellari telescoping pole saws are designed to cut tree limbs that are beyond the user's reach (up to 21 feet). Do not use the pole saw to cut anything other than tree limbs.

BLADE ASSEMBLY

Insert blade support in pole. The holes pole and holes in support blade need to match. After that insert bolt in the holes and screw nut not to much. (DIAGRAM A)

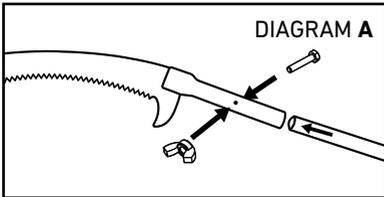


1. Insert blade support in pole
2. Insert bolt in the holes
3. Screw nut just enough

THE DUAL LOCKING SYSTEM FOR POLE EXTENSION


Castellari telescoping pole saws are equipped with a locking system to ensure the structural rigidity of the poles while extended. The part of the pole locking system is the **Locking Clamps**.

To extend the pole saw, first release the locking clamps (see DIAGRAM B), extending the pole from the larger tube. Once the pole is at the desired length, close the friction clamps (see DIAGRAM C).

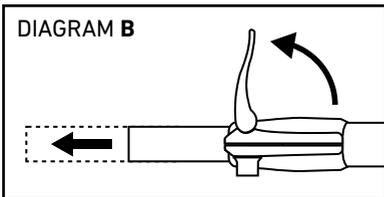


1. Release the locking clamp
2. Extend the pale from the larger tube

1. Close locking clamp

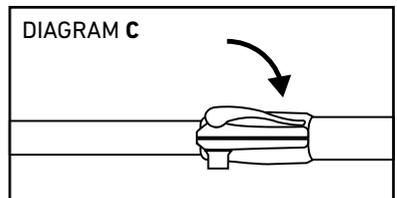

To store the pole after use, retract the poles in reverse arder, starting with the upper pale (see DIAGRAM D).

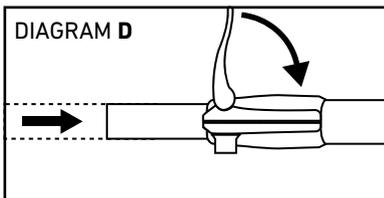

1. Release the locking clamp
2. Store the pole in the larger tube